



To Set Auto Nav

Step 1: At water's edge

Point the Predator Kontiki in the direction you want it to travel. If there is a current flowing along the beach, adjust the heading to compensate.



Step 2: To set AUTO NAV direction

Push and HOLD switch forward for 2 – 4 seconds until all LED lights have flashed up and down. The AUTO NAV is now set in the direction of travel.

Step 3: To set timer

The time automatically sets at 15 minutes. Click the switch FORWARD QUICKLY. Each click is for 5 minutes intervals. When all LEDs are showing on, it is maximum range setting (Run until the batteries go flat)



Step 4: Start motor

Click the Switch back to start/stop like shown in picture to start the motor.

Step 5: Test AUTO NAV

Move the predator side to side to check if the rudder at the front is working and going back to where it is set. If not, set it again as per instructions in step 2.

If motor will not go, you have not set the Auto Nav properly so you will have to start from step 1 again.

Step 6: Launching

Carry the Predator Kontiki into thigh-deep water and launch. Launch at the desired direction and give the Predator a running start with a push, while not necessary, this will help the Predator Kontiki stabilize in the water. Check that it is heading out to sea in the right direct. When launching hold onto the line and keep tension on it.